


TALKIES-WALKIES RECHARGEABLES

RECHARGEABLE WALKIE-TALKIES

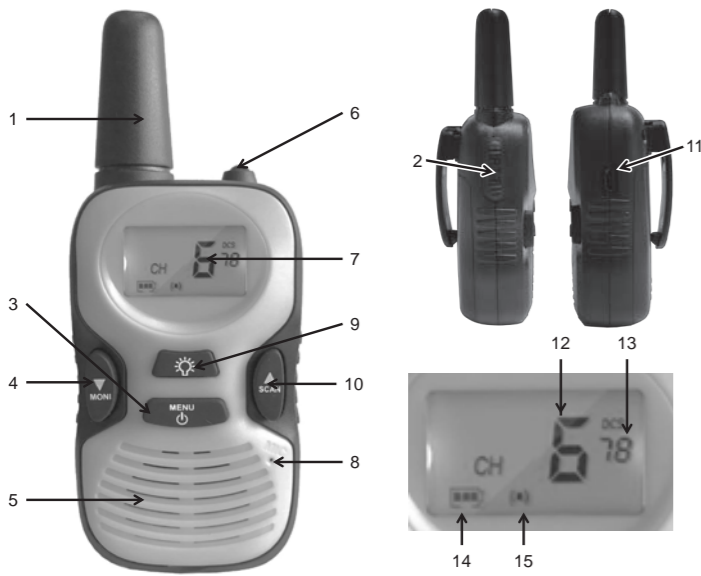

ENGLISH / FRANÇAIS / DEUTSCH / ESPAÑOL / PORTUGUÊS / ITALIANO / NEDERLANDS

TW43series

UNPACKING
Includes:
2 x walkie-talkies 1 x instruction manual 2 x micro-USB cables 2 x 3.6V Ni-MH rechargeable batteries 600mAh
WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

POWER SUPPLY
These walkie-talkies operate on 3.6V Ni-MH rechargeable batteries 600mAh (3 x 1.2V AAA) for each walkie-talkie (included). Remove the belt clip on the rear of the walkie-talkie to access the battery door.
To remove the belt clip
It is easier to fit the batteries without the belt clip in place. Pull the tab forward (away from the handset) to release the belt clip. Then lift the belt clip off.

Installing batteries:
1. Open the battery compartment located under the battery.
2. Install the 3.6V Ni-MH rechargeable batteries 600mAh (3 x 1.2V AAA) observing the polarity markings inside the battery compartment.
3. Close the battery compartment.
4. The walkie-talkie will automatically power on and are ready for use.

To fit the belt clip
Slide the belt clip down into the slot until it clicks into place.
Charging the batteries
Connect one end of the micro USB cable to the micro USB port (11) and the other end into the USB port of your powered computer or plug it to a USB adapter connected to a wall socket.
Power source: 5.0V = 1.0A

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exceeded batteries are not to be short circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the game for a long period of time. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, remove the batteries and insert them again.

PRODUCT DESCRIPTION
1. Antenna 5. Speaker 9. Light on/off 13. CTCSS/DCS (sub channels) display
2. PTT Talk/Call/Select button 6. Flashlight 10. SCAN/Up button 14. Battery indicator
3. On/Off & Menu 7. LCD screen 11. Micro USB port 15. Sound on/off
4. Monitor/down button 8. Microphone 12. Channel/Mode display

SAFETY INFORMATION
Important safety warning
• To reduce radio frequency exposure when you're using your TW43series, hold the handset at least 5cm (2 inches) from your face.
• Never use your walkie-talkies outdoors in a thunderstorm.
• Don't use your PMR in rain.
• If your PMR becomes wet, turn it off and remove the battery pack. Dry the battery compartment and leave the battery cover off for a few hours.
• Don't use the PMR until it is completely dry.
• Keep the PMR out of the reach of babies and young children.
• Battery should not be exposed to excessively heat such as sunshine, fire or the like.
• The device complies with RF specifications when used near your body. Keep a distance of 2.5 cm from the body. Ensure that the device accessories, such as a device case and voice holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION.
• Keep minimum distance around the apparatus for sufficient ventilation;
• The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
• No naked flame sources, such as lighted candles, should be placed on the apparatus;
• The use of apparatus under abnormal or moderate climates;
• Batteries should be disposed safely. Take them to the collection container in order to protect the environment;

FUNCTIONS
Switching the walkie-talkies on and off: To turn the walkie-talkies on and off, hold down the on/off button for 2 to 3 seconds. You will hear a musical tone each time to confirm.
Volume control: To adjust the loudspeaker volume, press the ▲ or ▼ button
Changing the channels:
Your walkie-talkie has eight channels, numbered 1 to 8. To communicate with other walkie-talkie users within the range, you must all have your walkie-talkie tuned to the same channel. Press the MENU button once. The current channel number flashes on the display. Press the ▲ or ▼ buttons to go to the channel you want. Press the PTT button to confirm the channel setting.
Changing the subchannel: If there are many device users near you, there is a chance that some of the users are operating on the same radio channel. Press the MENU button twice. The current CTCSS/DCS code will flash on the display. Press the up/down button to choose among the 121 available codes. Press the PTT button to confirm and return to stand-by mode.
Speaking to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtone: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

Ringtones: You can send ringtones to other handsets within range that are tuned to the same channel (and sub-channel if applicable) by short pressing the PTT button. Press the MENU button 4 times until "CA" is displayed on the screen. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Scan (SCAN):
Press and hold the UP ▲ button for 3 seconds. "SCAN" function indicator will appear on the display and the device will scan continuously through channels from 1 to 121. Press the MENU button once. The current channel number flashes on the display. Press the UP ▲ or DOWN ▼ button to choose among 10 available call tones. Press the PTT button to confirm and return to stand-by mode.
Hands free function (VOX): Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display. Press UP ▲ button to set the VOX sensitivity level between 1 and 3 (level 3 is the highest sensitivity level). Press down on the PTT button to confirm and return to stand-by mode. Press the PTT button to confirm and return to stand-by mode.
Speaker to another walkie-talkie user: Press and hold the PTT button. Walkie-Talkie transmission is a one-way-at-a-time - while you are speaking, you cannot receive a transmission. Make sure to release the PTT button when you are done talking; this will let your partner communicate back.

TROUBLESHOOTING GUIDE

Symptom	Solution
No power	<ul style="list-style-type: none"> Battery is low or not fitted correctly. Time-Out: La communication s'arrête automatiquement après 30 ou 60 secondes si la bouton PTT est enclenché.
Weak reception/ no reception/ noisy reception	<ul style="list-style-type: none"> Battery is low or not fitted correctly. Other user is not within the same channel. The walkie-talkies are not tuned to a normal voice, 5-8cm (2.3 inches) away from the microphone. Local conditions are impairing reception: move to a different location away from obstructions and as high as possible. You are holding the walkie-talkie too close to your body. Other user is not transmitting. Other user is too close. There is interference from other users on the same channel: agree with the other users to use a different channel.
Cannot change channels	<ul style="list-style-type: none"> Battery is low or not fitted correctly.

OPERATING FREQUENCIES

Channel 1: 446.00625MHz	Channel 4: 446.04375MHz	Channel 7: 446.08125MHz	SAR values: Face: 0.145 W/kg Body: 0.218 W/kg
Channel 2: 446.01875MHz	Channel 5: 446.05625MHz	Channel 8: 446.09375MHz	
Channel 3: 446.03125MHz	Channel 6: 446.06875MHz		

SIMPLIFIED EU DECLARATION OF CONFORMITY

We, Lexibook S.A., 6 avenue des Andes Bâtiment 11 91940 Les Ulis - France
Kind of product: Walkie-Talkies
Type designation: TW43series
Frequency range: 446.0 - 446.1 MHz
Transmitted power: $s27dBm$ s500mW
Hereby, Lexibook Limited declares that the radio equipment type TW43series is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.lexibook.com/doc/w43tw43_1.pdf

Yiu Wai Man
Product Development Manager
Hong Kong

MAINTENANCE AND WARRANTY

Only use a soft, slightly damp cloth to clean the unit. Do not use detergent. Do not to expose the unit to direct sunlight or any other heat source. Do not immerse the unit in water. Do not dismantle or drop the unit. Do not try to twist or bend the unit.
Note: Please keep this instruction manual. It contains important information.
This product is covered by our 2-year warranty. For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference. In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.
Reference: TW43series
Designed and developed in Europe - Manufactured in China
© Lexibook®

United Kingdom & Ireland
For after-sales service, please contact us at savcomfr@lexibook.com.

Environmental Protection
Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).
Correct disposal of batteries in this product
(Applicable in countries with separate collection systems) This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health. We strongly advise you to take your product to an official collection point or service centre to have a professional remove the rechargeable battery, inform you about the local separate collection system for electronic and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable battery with normal household waste. For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service centre.

FRANÇAIS
Contenu de l'emballage:
2 x talkie-walkie 1 x mode d'emploi 2 x câble micro-USB 2 x 3.6V Ni-MH batteries rechargeables 600mAh
AVERTISSEMENT: Tous les matériaux d'emballage, comme le scotch, les feuilles en plastique, les ficelles et les étiquettes ne font pas partie du produit et doivent être jetés.
Alimentation
Ces talkies-walkie fonctionnent avec 3.6V Ni-MH batteries rechargeables 600mAh (3 x 1.2V AAA) pour chaque talkie-walkie (fournies). Enlevez l'attache ceinture à l'arrière du talkie-walkie pour accéder au compartiment des piles.
Pour enlever l'attache ceinture
Il est plus facile d'installer le bloc pile sans l'attache. Tirez la languette vers l'avant (en éloignant l'appareil) pour détacher l'attache ceinture. Retirez alors l'attache ceinture.
Installation des piles
1. Ouvrez le compartiment des piles sous l'appareil.
2. Insérez 3.6V Ni-MH batteries rechargeables 600mAh (3 x 1.2V AAA), en respectant la polarité indiquée au fond du compartiment des piles.
3. Refermez le bouchon.
4. Les talkies-walkies se mettent automatiquement en marche et sont prêts à l'emploi.
Pour remettre l'attache ceinture
Faites glisser l'attache dans la fente en cliquant.
Brancher l'appareil
Insérez une extrémité du câble micro-USB (inclus) dans le port micro-USB (11), et l'autre extrémité au port USB d'un ordinateur ou sur un adaptateur USB connecté à une prise murale.
Alimentation: 5.0V = 1.0A

DEUTSCH
Inhalt:
2 x Walkie-Talkies 1 x Bedienungsanleitung 2 x Micro USB-Ladekabel 2 x 3.6V Ni-MH Wiederaufladbare Batterien 600mAh
WARNUNG: Alle Verpackungsmaterialien wie Klebeband, Plastiktüten, Drahtbinder und Etiketten sind nicht Teil dieses Produktes und sollten entfernt werden.
Diese Walkie-Talkies werden mit 3.6V Ni-MH Wiederaufladbare Batterien 600mAh (3 x 1.2V AAA) (beiliegend). Entfernen Sie den Gürtelclip an der Rückseite des Walkie-Talkies, um auf die Batterieabdeckung zuzugreifen.
Ziehen Sie den Gürtelclip ab.
Nehmen Sie die Abdeckung nach vorne (vom Gerät weg), um den Gürtelclip zu entfernen. Ziehen Sie den Gürtelclip dann ab.
Batterien einlegen:
1. Zum Einlegen der Batterien das Batteriefach an der Rückseite des Gerätes.
2. Setzen Sie 3.6V Ni-MH Wiederaufladbare Batterien 600mAh (3 x 1.2V AAA) ein, wobei Sie die im Inneren des Batteriefaches angegebene und auf der anderen Seite abgebildete Polarität beachten.
3. Schließen Sie das Batteriefach.
4. Die Walkie-Talkies schalten sich automatisch ein und sind einsatzbereit.
Gürtelclipbefestigung
Schieben Sie den Gürtelclip in den Schlitz, bis er einrastet.
Stromversorgung
Schließen Sie den keinen Stecker des Micro USB-Kabels (enthalten) an den Mikro-USB-Port (11) und schließen Sie das andere Ende an einen USB-Anschluss des eingeschalteten Computers oder an einen USB-Netzadapter an, den Sie in die Steckdose stecken.
Stromversorgung: 5.0V = 1.0A

ESPAÑOL
Contenido:
2 x walkie-talkies 1 x manual de instrucciones 2 x cable de carga USB 2 x 3.6V Ni-MH pilas recargables 600mAh
ADVERTENCIA: Todos los elementos utilizados para el embalaje, como por ejemplo cintas, recubrimientos plásticos, ataduras metálicas y etiquetas no forman parte del aparato y deberán desecharse.
Estos walkie-talkies funcionan con 3.6V Ni-MH pilas recargables 600mAh (3 x 1.2V AAA) pilas para cada walkie-talkie (incluidas).
Para remover el pasador para el cinturón
Es más fácil instalar la batería con el pasador para el cinturón quitado. Tire hacia delante de la pestaña (hacia fuera del terminal) para liberar el pasador. Extraiga entonces el pasador.
Instalación de las baterías:
1. Abra el compartimento de las pilas, que se encuentra en la parte posterior de la unidad.
2. Inserte 3.6V Ni-MH pilas recargables 600mAh (3 x 1.2V AAA), siguiendo las indicaciones de dirección de las polaridades situadas dentro del compartimento.
3. Cierre el compartimento de las pilas.
4. Los walkie-talkies se encenderán automáticamente y estarán listos para utilizarse.
Para colocar el pasador para el cinturón
Desplace el pasador hacia abajo hasta que encaje en su posición.
Alimentación: 5.0V = 1.0A

ITALIANO
Contiene:
2 x walkie-talkies 1 x manuale di istruzioni 2 x cavo di carica USB 2 x 3.6V Ni-MH pile ricaricabili 600mAh
AVVERTENZA: Tutti gli elementi utilizzati per il packaging, come ad esempio nastri, rivestimenti plastici, fasciature metalliche e etichette non fanno parte dell'apparato e dovranno essere smaltiti.
Questi walkie-talkies funzionano con 3.6V Ni-MH pile ricaricabili 600mAh (3 x 1.2

• El dispositivo cumple con las especificaciones de radiodifusión cuando se utiliza correctamente. Manténgase a una distancia de 2,5 cm s **ADVERTENCIA! EXISTE RIESGO DE EXPLOSIÓN SI LA PILA SE COLOCA DE FORMA INCORRECTA. REEMPLAZARE.** **ELIMINE LAS PILAS USADAS SIGUIENDO LAS INSTRUCCIONES.**

- Guardar una distancia mínima alrededor del aparato, para que tenga una ventilación adecuada;
- Per nádurso se debe guardar el aparato, para que se evite la obstrucción de las aberturas por objetos como periódicos, mantles, cortinas, etc.;
- No es conveniente colocar sobre el aparato fuentes de llama viva, como velas encendidas;
- El aparato ha sido diseñado para su uso en un clima templado o tropical;
- Las pilas deben desecharse de manera segura. Disponibles en contenedores selectivos previstos a este efecto, para proteger el medio ambiente;

EMPEZANDO

Encendido y apagado de los walkie-talkies: Para encender y apagar los walkie-talkies, mantén presionado el botón de encendido/apagado entre 3 segundos. Cada vez que lo hagas escucharás un tono musical de confirmación.

Control de volumen: Para ajustar el volumen del altavoz pulse las teclas **▲** o **▼**.

Cambio de canales: El PMR tiene 8 canales, numerados de 1 a 8. Para comunicarse con otros usuarios de PMR situados dentro del rango de emisión, todos los PMR deben estar sintonizados en el mismo canal. Pulse la tecla MENU una vez. El número de canal actual aparecerá en la pantalla. Utilice las teclas **▲** o **▼** para seleccionar el canal deseado. Pulse las teclas PTT para confirmar el ajuste de canal.

Cambio de subcanales: Si hay muchos usuarios de dispositivo cerca de usted, existe la posibilidad de que algunos de los usuarios estén operando en el mismo canal de radio. Presione el botón de MENU dos veces y el código CTCSS/DCS en curso aparecerá en pantalla. Presione el botón de ascender/descender para seleccionar uno de los 121 códigos disponibles. Retire el botón PTT para confirmar y volver al modo de standby.

Para hablar a otro usuario de PMR: Mantenga pulsada la tecla PTT. Hable con claridad al micrófono, en un tono normal – no grite. Cuando haya terminado de hablar suelte la tecla PTT. La transmisión PMR es una transmisión de unidireccional así como momento – no puede recibir al mismo tiempo que está transmitiendo.

Tono de llamada: Puede enviar un tono de llamada a otros dispositivos ubicados dentro del alcance y sintonizados en el mismo canal (y subcanal si el caso) haciendo una presión corta sobre el botón PTT. Para cambiar la melodía, presione el botón de MENU 4 veces hasta que "CA" aparezca en pantalla. Presione los botones **▲** o **▼** para elegir uno de los 10 tonos de llamada disponibles. Presione el botón PTT para confirmar y volver al modo de standby.

Rastreo de canales: Cuando está activada la función de rastreo de canales, la unidad estará continuamente rastreando los 8 canales hasta que encuentre uno por el cual está transmitiendo algún usuario. Mantenga pulsada la tecla **▲**. En la pantalla se mostrará SCAN y el terminal comenzará a rastrear los canales. Pulse las teclas PTT o MENU para detener la función.

Función manos libres (VOX): Presione el botón de MENU tres veces, la configuración VOX en curso aparecerá en pantalla y el icono de VOX aparecerá en pantalla. Presione el botón **▲** para configurar el nivel de sensibilidad de VOX entre 1 y 3 (el nivel 3 es el de sensibilidad más alta). Presione el botón hasta que "OF" aparezca en pantalla para desactivar la función VOX. Presione el botón PTT para confirmar y volver al modo de standby. En el modo de standby, la radio transmitirá o recibirá voz con otros sonidos o su alrededor. El uso de la función VOX no se recomienda si el entorno es ruidoso o hace viento. Nota: El modo de VOX se desactiva al presionar el botón PTT.

Monitor: Mantenga presionado el botón descender **▼** durante unos 3 segundos para activar/desactivar el monitor.

Señal de cambio: Una vez que ha soltado del botón PTT, el dispositivo envía una señal de cambio para confirmar que usted ha terminado de hablar. Presione 6 veces el botón de MENU, "RO" aparecerá en pantalla. Presione los botones ascender **▲** /descender **▼** para activar/desactivar la función de señal de cambio. Presione el botón PTT para confirmar su selección y volver al modo de standby.

Retroluminación de la pantalla: Presione cualquier botón, excepto el botón de PTT, para activar la retroluminación de la pantalla LCD. La retroluminación permanecerá encendida durante unos 5 segundos.

Campanilla: Activar/desactivar el sonido de las teclas. Pulse el botón de MENU 7 veces. Pulse el botón UP **▲** /Down **▼** para activar/desactivar el sonido de las teclas. Pulse el botón PTT para confirmar su elección y volver al modo de suspensión.

Time-Out: La comunicación se para automáticamente al cabo de 30 o 60 segundos si el botón PTT está presionado. Pulse la tecla MENU 5 veces. Escija entre 30,60 segundos u OF.

Rango de transmisión

El rango de transmisión depende de las circunstancias ambientales y del terreno. Será mayor (hasta 9km o 3 millas) en espacios abiertos, sin obstáculos como edificios o montañas. Si tienes problemas con la comunicación, es aconsejable cambiar a un lugar con menos tráfico y ruido en el entorno.

• No intente usar dispositivos que estén más cerca que 1,5 m (5 pies). Pueden producir interferencias.

• PMR es una banda de licencia abierta –identifíquese siempre cuando transmite, ya que otras personas pueden estar comunicándose por el mismo canal.

RESOLUCIÓN DE PROBLEMAS

Problema	Resolución
No se enciende	<ul style="list-style-type: none">• La batería está baja o no está colocada correctamente.• No ha encendido la unidad.
Recepción débil / No hay recepción / Recepción con ruido	<ul style="list-style-type: none">• La batería está baja o no está colocada correctamente.• El interconector está fuera del rango de transmisión.• El PMR no está sintonizado al mismo canal.• Hable en un tono normal a una distancia de 5 a 8 m (2 a 3 pulgadas) del micrófono.• Las condiciones locales dificultan la recepción: sitúese en otro lugar, más apartado de edificios y más alto a ser posible.• Sustentando el walkie-talkie demasiado cerca de su cuerpo.• El interconector no está transmitiendo.• El interconector está demasiado cerca.• No intente usar dispositivos que estén más cerca que 1,5 m (5 pies). Pueden producir interferencias debidas a otros usuarios que se comunican por el mismo canal: acuerden utilizar un canal diferente.
No se puede cambiar de canal	<ul style="list-style-type: none">• La batería está baja o no está colocada correctamente.

FREQUÊNCIA DE FUNCIONAMENTO:

- Canal 1: 446.00625MHz - Canal 4: 446.04375MHz - Canal 7: 446.08125MHz
- Canal 2: 446.01875MHz - Canal 5: 446.05625MHz - Canal 8: 446.09375MHz
- Canal 3: 446.03125MHz - Canal 6: 446.06875MHz

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA

Nosotros, Lexibook® S.A.,
6 avenue des Andes
Bâtiment 11
91940 Les Ulis - Francia

Tipo de producto: Walkie-Talkie
Designación de tipo: TW43series
Sistema de frecuencia: 446.0 - 446.1 MHz
Potencia transmitida: $s27\text{dBm}$ $s500\text{mW}$

Por la presente, Lexibook Limited declara que el tipo de equipo radioeléctrico TW43series es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en ladrección Internet siguiente:
https://www.lexibook.com/doc/tw43hw43_1.pdf



MANTENIMIENTO Y GARANTÍA

Para limpiar el juguete, utilice únicamente un paño suave humedecido en agua. No utilice ningún producto detergente. No exponga el juguete a la acción directa de los rayos del sol ni a ninguna otra fuente de calor. No mojar el juguete. No desmonte o deje caer el juguete.

Nota: Conserve este manual de instrucciones ya que contiene informaciones de importancia. Este producto está cubierto por nuestra garantía de 2 años. Para cualquier reclamación bajo la garantía o petición de servicio post venta deberá dirigirse a su revendedor y presentar su comprobante de compra. Nuestra garantía cubre los defectos de material o montaje que sean imputables al fabricante, con la excepción de todo aquel deterioro que sea consecuencia de la no observación de las indicaciones indicadas en el manual de instrucciones, o de toda intervención impropiciada sobre este aparato (como por ejemplo el desmontaje, exposición al calor o a la humedad, ...). Se recomienda conservar el embalaje para cualquier referencia futura. En nuestro constante afán de superación, podemos proceder a la modificación de los colores y detalles del producto mostrado en el embalaje.

Referencia: TW43series
Diseñado y desarrollado en Europa – Fabricado en China.
© Lexibook®

Signaos en
@LexibookCom

España
Para servicio postventa, entre en contacto con nuestros equipos:
avc@lexibook.com

Protección medioambiental
[Los aparatos eléctricos pueden ser reciclados y no deben ser desechados junto con la basura doméstica habitual] Apoye activamente el aprovechamiento racional de los recursos y ayude a proteger el medio ambiente enviando este producto a un centro de reciclación para reciclaje (en caso de estar disponible).

Eliminación apropiada de las baterías de este producto
(Aplicable en países con sistemas de recogida selectiva)
Este símbolo significa que el producto contiene una batería cubierta por la Directiva europea 2013/56/UE que no puede desecharse conjuntamente con la basura doméstica normal. Las baterías no podrán eliminarse en los vertederos municipales sino que deberán depositarse en las instalaciones de recogida designadas por las autoridades gubernamentales o locales. La eliminación correcta de sus baterías ayudará a evitar posibles consecuencias negativas para el medio ambiente, los animales y la salud humana. Informe acerca del sistema de recogida selectiva local para productos eléctricos y electrónicos y baterías. Respete la normativa local y nunca desmonte el producto ni las baterías nominalmente con los residuos domésticos. Para obtener una información detallada sobre el desecho de sus baterías gastadas, póngase en contacto con la oficina o el centro de servicio de eliminación de residuos municipales.

RETIRAR O APARELHO DA CAIXA

Inclui:
2 x walkie-talkies 1 x manual de instruções 2 x cabo micro USB 2 x 3,6V Ni-MH pilhas recarregáveis 600mAh
AVISO: Todos os materiais de empacotamento, como fita, películas de plástico, arames e etiquetas não fazem parte da unidade e devem ser eliminados.

ALIMENTAÇÃO

Estes walkie-talkies funcionam com 3,6V Ni-MH pilhas recarregáveis 600mAh (3 x 1,2V AAA) pilhas em cada walkie-talkie (incluídas). Retire o clipe para o cinto na parte traseira do walkie-talkie para poder aceder à tampa do compartimento das pilhas.

Para retirar o clipe para o cinto
É fácil colocar as pilhas sem que o clipe para o cinto esteja no lugar.Puxe a aba para a frente (afastar da unidade) para retirar o clipe para o cinto. De seguida retire-o.

Instalação das pilhas:
1. Abra a tampa do compartimento das pilhas na parte traseira da unidade.
2. Insira 3,6V Ni-MH pilhas recarregáveis 600mAh (3 x 1,2V AAA) tendo em conta a polaridade indicada no fundo do compartimento das pilhas.
3. Feche o compartimento das pilhas.
4. Os walkie-talkies ligam-se automaticamente e estão prontos a ser utilizados.

Para voltar a colocar o clipe
Para afastar o clipe para o cinto para dentro da ranhura até ouvir um clique, o que significa que já está no devolvidor.

Alimentação
Ligue a extremidade pequena do cabo micro USB (incluído) na porta micro USB (11) e a outra extremidade do cabo micro USB na porta USB do seu computador ligado à alimentação ou adaptador de alimentação do tipo USB.
Alimentação: 5,0V Ni-MH

As pilhas recarregáveis só deverão ser recarregadas sob a supervisão de um adulto. Não misture diferentes tipos de pilhas ou pilhas novas com pilhas usadas. Só deverá utilizar pilhas do mesmo tipo ou de um tipo equivalente às recomendadas. As pilhas deverão ser colocadas com a polaridade correcta. Deverá retirar as pilhas gastas do brinquedo. Não coloque os terminais em curto-circuito. Não atre a pilhas para o fogo. Retire as pilhas caso não utilize a unidade durante um longo período de tempo. Quando o seu fiar físico ou o jogo não responder, tente substituir as pilhas. As pilhas não deverão ser expostas a calor em excesso, como luz directa do sol, fogo ou algo parecido.

AVISO: O mau funcionamento ou perda de memória podem ser causados por fortes interferências ou descargas electrostáticas. Caso ocorra algum funcionamento anormal, retire e volte a colocar as pilhas.

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria

1. Antenna 5. Altoperante 10. SCAN/UP 15. Suono on / off
2. Pulsante PTT (Push To Talk/ 6. Torcia 11. Porta micro USB
Chiamata/Selezione) 7. Schermo LCD 12. Indicatore canale/modality
3. On/Off & Menu 8. Microfono 13. Indicatore CTCSS/DCS (sotto-canal)
4. Pulsante Monitor/Giù 9. Accendi /spegni la luce 14. Livello batteria