

MAINTENANCE AND WARRANTY

To clean the unit, use only a cloth slightly dampened with water and no detergent. Do not leave the appliance in direct sunlight or expose it to a heat source. Do not immerse the unit in water. Do not drop it. Do not attempt to disassemble. Do not bend or twist the unit.

NOTE: Please keep this instruction manual, it contains important information. This product is covered by our 2-year warranty.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.).

It is recommended to keep the packaging for any further reference. In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

Note: This toy contains a battery that is non-replaceable. Batteries are only to be charged by adults or by children at least 8 years old.

WARNING:

- Risk of explosion if battery is incorrectly replaced. Please only replace it with a same or an equivalent battery.
- The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.

Precautions for use:

- Keep a minimum distances around the apparatus for sufficient ventilation;
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- Attention should be drawn to the environmental aspects of battery disposal;
- The use of apparatus in moderate climates.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.

WARNING! Not suitable for children under 3 years. Choking Hazard-Small parts.

Reference: STN01ANXEN

Designed and developed in Europe – Made in China.

© LEXIBOOK®

Lexibook S.A.

6 avenue des Andes
Bâtiment 11
91940 Les Ulis
France

Lexibook UK

PO Box 59
SOUTH MOLTON
EX36 9AU
UK



Tous les papiers
sont recyclables

Suivez-nous
@LexibookCom



For after-sales service, please contact us at: savcomfr@lexibook.com.

Environmental Protection:

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).



Correct disposal of batteries in this product

(Applicable in countries with separate collection systems) This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. All batteries should be disposed separately from municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health. We strongly advise you to take your product to an official collection point or service center to have a professional remove the rechargeable battery. Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.

IM Code: STN01ANXENIM2321

MY POLAR BEAR STORYTELLER



Instruction Manual

www.lexibook.com

LEXIBOOK®

STNOIANXEN



Stories — Melodies
 Previous — Next

under the base of the storyteller to the "ON" mode.
 To stop the storyteller, push this button to the "OFF" mode.

UNPACKING YOUR DEVICE

When unpacking, ensure the following elements are included:

- 1 x Storyteller
- 1 x Charging cable
- 1 x Instruction manual

WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

LISTENING TO A STORY

Press the button to listen to a random story.
 To listen to the following story press .
 To listen to the previous story, press this button .
 To pause the story, long press . Press and hold again to resume playback.

LISTENING TO A MELODY

To listen to a melody, press the button .
 To change the melody, press the button again.

TURNING ON THE NIGHTLIGHT

To turn on the nightlight, press the polar bear, or the button on the bottom of the storyteller.

ADJUSTING THE VOLUME

The storyteller offers 4 different volume levels. By default, the storyteller is set to volume 3.
 To decrease the volume, press and hold .
 To increase the volume, press the .

BATTERY INFORMATION

My polar Bear Storyteller operates with a rechargeable battery 3.7V Li-ion, 400mAh, which can be charged with the USB cable.

To charge My Polar Bear Storyteller, insert the small end of the USB charging cable into the battery connector. Connect the other end of the cable to a computer's USB port.

USB cable (included): 5.0 V 500mA Input: 100 - 240V ~ 50/60Hz

This toy is only to be connected to equipment bearing either of the following symbols: or .

Warning: Disconnect the adapter if the game is not used for a long period of time to prevent overheating. When the game is powered by an adapter, do not play outside. Check the state of the adapter and the connection cords regularly. If their condition is deteriorating, do not use the adapter until it has been repaired. The toy shall only be used with a transformer for toys. The adapter is not a toy. The device should be disconnected from the power supply to be cleaned if liquids are used for cleaning. The toy is not intended for children under 3 years old. Misuse of transformer can cause electrical shock. Parental advisory: transformer and adaptor for toys are not intended to be used as a toy. The usage must be under parental advice.

WARNING: Significant electromagnetic interference or electrostatic discharges may cause the device to malfunction or lose data. If the device is not functioning correctly, switch it off and then on again, or unplug the USB cable.

MY STORIES

- | | |
|----------------------------------|-----------------------------------|
| 1 - Goldilocks | 16 - Jack and the Beanstalk |
| 2 - The Little red riding hood | 17 - The old man and his grandson |
| 3 - The 3 little pigs | 18 - The clever monkey |
| 4 - The fox and the grapes | 19 - Old Sultan |
| 5 - Belling the cat | 20 - The Singing Bone |
| 6 - The Wolf and the Crane | 21 - Puss in Boots |
| 7 - The Lion and the Mouse | 22 - The Fairy |
| 8 - The ant and the grasshopper | 23 - The Hare & The Tortoise |
| 9 - Tiddalick the Frog | 24 - The Enchanted Knife |
| 10 - Baba Yaga | 25 - The Bundle of Sticks |
| 11 - The Stone Cutter | 26 - The Fox & The Stork |
| 12 - Blue Beard | 27 - The Sleeping Beauty |
| 13 - The Queen Bee | 28 - The Old woman in the woods |
| 14 - The Flute Player of Hamelin | 29 - The Thirsty Crow |
| 15 - Rapunzel | 30 - The Spirit in the Bottle |

MY MELODIES

- 1 - It's party time
- 2 - Little polar bear
- 3 - On holiday

START-UP GUIDE

My Polar Bear Storyteller is a real educational tool that will allow your child to develop his vocabulary, his concentration and his autonomy while having fun. To turn on My Polar Bear Storyteller, simply push the button