

Lexipad® 10"

Instructions manual

INTRODUCING YOUR TABLET

1. Touch screen
2. Camera / front camera
3. Loudspeaker
4. USB-C charging port
5. TF/SD card reader
6. 3.5 mm audio jack
7. Volume + button
8. Volume - button
9. On / Off button
10. Rear camera

WARNING: All packaging materials such as tape, plastic sheeting, string and labels are not part of this product and should be disposed of.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

SWITCHING YOUR TABLET ON AND OFF

- To switch your tablet on, press and hold the "On/Off" button for 3 seconds.
- To switch off your tablet, press and hold the "On/Off" button for 3 seconds and select "Switch off".
- To put your tablet to sleep, briefly press the "On/Off" button. To exit standby mode, briefly press the On/Off button again. A padlock appears at the bottom of the screen; slide it up to unlock the tablet.

Note: If the battery level is too low, the tablet will not switch on. Charge it for a few minutes and then try again.

In the event of a malfunction : To force the tablet to switch off, press the "On/Off" button for 8 seconds. Your data will not be erased from the tablet.

CHARGING YOUR TABLET

To charge your tablet, you can plug it in :

- To an electrical socket:** Plug the USB-C cable into the USB-C port on the tablet, connect the other end to the mains adapter supplied, then plug the mains adapter into an electrical socket.
- To your computer, portable charger or other USB device:** Plug the USB-C cable into the USB-C port on the tablet, then connect the other end to the USB port on your USB device.

CAUTION: The help of an adult is required when plugging in, to avoid forcing and breaking the USB-C plug. You are also advised not to use the tablet while it is being charged.

TWO INTERFACES

This tablet offers two interfaces:

- The **Lexibook® interface**, safe and easy to use, allowing parents to control the amount of time the tablet is used and the applications available to each user.
- The **Android™ interface**, for more freedom as on a classic Android device. This is the interface that appears on first switch-on.

Before giving the tablet to your child, make sure it is on the Lexibook® interface by clicking on the "Lexibook" icon on the home screen.

INSTALLING Lexibook interface

- On 1st start-up, click on the "Lexibook" icon.
- Press "Get started". The installation of child interface will begin.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

INSTALLATION Android interface

- Select the language you want by clicking on the language arrow. Then click on "Start".
- The tablet will then ask you to connect to Wi-Fi. To make it easier to start, click on "Configure offline" in the bottom right-hand corner.
Note: you will be able to connect to Wi-Fi later by going in Settings.
- Click on "Continue"
- Change the city, date and time, and click on "Next" button.
- Select or deselect Google's confidentiality rules and click "Accept".
- Click on "Skip anyway".
- Your interface is now installed! You can use your tablet as you wish!

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

PARENTAL CONTROL

In the Lexibook® interface, click on the padlock, then enter your parental password.

Have you forgotten your password? On the password screen, click on the "Key" icon and follow the instructions.

APPLICATION MANAGEMENT

Application management allows parents to manage access to applications for each profile. Select "Manage apps".

Select the profile you wish to manage.

- Classify applications in the desired categories: Knowledge, Games, Internet/Multimedia, My applications.
- Long press on an application to highlight it, then drag it into the category you want. Once categorised, the application takes on the colour of the chosen category.
- To remove an application from a category, drag it onto the "Recycle" icon. The colour disappears.

Note: The "Allow child to categorise an app after installation" option allows the user to insert an application into a category and access it immediately after installation. Deactivate this option if you wish to manage applications manually.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

TIME MANAGEMENT

Time management allows you to limit the amount of time you can access the tablet.

- Select "Time management".
- Choose the parameters that suit and confirm with "OK".

CAUTION: To ensure that time management functions correctly, do not change the date/time settings when it is activated.

LEXIBOOK APPLICATIONS

If you did not install the Lexibook fun and educational applications during the installation of the child interface, you can install them by pressing clicking on "Lexibook apps".

ACTIVATE AND DEACTIVATE WI-FI

To access the Wi-Fi settings, slide your finger from top to bottom. You can also access it by clicking with the mouse on the Wi-Fi icon on the top right of the screen.

- Slide the switch to the right to activate Wi-Fi; the tablet will display the available wireless networks.
- Choose a network to connect to Wi-Fi.
- Slide the switch to the left to deactivate Wi-Fi.

Note: When Wi-Fi is activated, the Wi-Fi icon appears at the top right of the screen. The fuller the cone, the stronger the Wi-Fi signal.

QWANT JUNIOR

To launch Qwant Junior, click on the icon.

You can then enjoy secure, fast and rich browsing worthy of the best browsers (favourites, tabs, etc.).

Every day, the Qwant Junior home page offers a selection of the best fun and educational content.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

YOUR LAPTOP'S APPLICATIONS

What makes a LAPTAB® so unique? Its preloaded content, fun for hours of fun and educational content for learning while having fun!

SERVICES

Google Play
Google Play is your entertainment without limits. It brings together all the entertainment you love and helps you explore it in new ways. Anytime, anywhere. We've brought the magic of Google to music, movies, TV, books, magazines, apps and games, so you can make the most of your content every day.
By default, this application is not available on the Lexibook® interface. To authorise access to it, refer to the section "Application management" (page 5).
Note: all apps downloaded from Google Play will not support the landscape mode.

Qwant Junior
Qwant Junior, the secure search engine for children. See page 6 for more details.

Mon Agenda
Organise lessons, homework, notes and other important events with ease!

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

EDUCATIONAL CONTENT

Power Academy
Access 500 interactive lessons and quizzes to enrich your general knowledge!

My Translator
Access an intuitive 15-language translator with a database of 10,000 words!

RDE 7-11 years old
Educational quizzes on different themes: My Library, French Champion, Math Champion, I learn English through songs, the holiday quiz and Junior Logic Games.

RDE 12+
Educational quizzes with different themes: Maths Tests, French Tests, English Tests, The Classics Library, Expert Logic Games and Arts Quiz.

Dictation Kid
Practice dictation and revise grammar, conjugation and vocabulary!

READora
Access your virtual library with this application. 180 e-books are already available on your tablet.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

FUN CONTENT

Bubble Blast Halloween
A puzzle game in which you blow up Halloween characters to trigger a chain reaction and eliminate them!

Burger
You've been hired by a chain restaurant to serve customers as quickly as possible!

Tangram
A simple puzzle game that involves putting scattered shapes back into place to create a new, pre-defined shape!

Fireman
You take on the role of a daredevil firefighter and have to save trapped trapped animals from the flames of a fire.

My hobbies
52 creative activities to discover: recipes, indoor and outdoor games science experiments and much more!

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

SPECIFICATIONS

Screen	10-inch capacitive touchscreen (25.4 cm)
Screen resolution	HD 1280 x 800 pixels
Operating system	Android™ 13
Processor	Octa core A523
Internal memory	128 GB
RAM memory	4 GB
Wi-Fi	802.11 b/g/n, frequency 2402-2472MHz
Bluetooth	5.0, frequency 2402-2480 MHz
Transmission power	Bluetooth: 1.49dBm Wi-Fi: 16.61dBm
Audio	Built-in loudspeaker
Connexions	1x USB-C charging port, 1x TF card reader, 1x 3.5 mm audio jack
Battery	Rechargeable lithium 4500mAh, 3.8V
Adapter specifications	Input: AC 100-240V ~ 50/60Hz, 0.35A Output: 5.0V ~ 2.0A Average active efficiency: 81.85% Efficiency at low load: --- No-load power consumption: 0.06W Model: AS1201A-050200BSU
Autonomy	Up to 4 hours continuous use and 4 days standby time
Camera	2MP/5MP
Dimensions	243 x 162 x 11mm
Weight	460g
SAR value	Body: 0.304 W/kg

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

SECURITY MEASURES

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). DOES NOT CONTAIN ANY USER SERVICEABLE PARTS. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

The symbols mean

DANGEROUS VOLTAGE :
The lightning flash with arrowhead symbol within a triangle is intended to alert the user to the presence of unfinsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING :
The exclamation mark inside the triangle alerts the user to the presence of important operating and maintenance instructions accompanying the product.

WARNINGS :

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- Do not expose this apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.
- The power plug is used as a disconnecting device and must always be easily accessible.
- In order to completely disconnect the appliance from the electricity supply, the power plug must be disconnected from the electrical socket.

Batteries should only be charged by adults or children over the age of 8. Incorrect use of the power supply may cause electric shock. The lithium battery must only be used with this appliance. Do not dismantle the battery. Do not dispose of the battery in fire or water. To avoid the risk of fire, burns or damage to the battery, ensure that no metal objects come into contact with the battery terminals. Handle damaged or leaking batteries with great care. In the event of contact with the electrolyte, wash the affected area with soap and water. In the event of contact with the eyes, rinse with water for 15 minutes and seek medical advice. Do not charge the battery if the ambient temperature exceeds 45°C. To dispose of the battery, contact your local retailer and ask for information about local regulations on battery disposal or recycling. To recharge the battery, use only the USB cable and adapter supplied. Batteries must never be exposed to excessive heat, such as sunlight or fire.

WARNING: Strong electromagnetic interference or electrostatic discharges may cause malfunction or data loss. If the device does not work properly, switch the tablet off and on again or reset it.

WARNING: Risk of explosion if the battery is incorrectly replaced. Only replace it with an identical or equivalent battery.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

SAFETY INSTRUCTIONS

WARNING : THIS PRODUCT IS NOT A TOY AND ADULT SUPERVISION IS RECOMMENDED.

- Read these instructions.
- Keep these instructions.
- Follow all instructions.
- Read all warnings.
- Do not use this product on your lap for more than 30 minutes without taking at least a 5-minute break.
- Do not use this product near water.
- Clean only with a soft cloth.
- Do not block any ventilation openings. Install according to the instructions.
- To avoid overheating when the appliance is plugged in or switched on, do not leave it in an unventilated space, such as a bag.
- Do not place this apparatus near any heat sources such as electric baseboard heaters, cookers or other apparatus (including amplifiers).
- Do not attempt to change the plug on the mains adaptor. If you are unable to insert it fully into the wall socket, contact an electrician to replace the obsolete socket.
- The power cable must be routed so that it is not likely to be walked on or pinched, particularly at the point where it is plugged in or out of the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, or has been dropped.
- Do not overload the electrical socket. Only use the power source as indicated.
- Use only replacement parts specified by the manufacturer.
- After servicing or repairing this product, ask the service technician to perform a safety check.
- Keep the appliance away from all metal objects (coins, keys, etc.). Do not leave it near magnetic fields which could cause data loss or damage the device.
- Do not drop the device. Do not expose it to shocks, friction or impact. When transporting the device, place it in a protective case.
- Protect the equipment from damp and rain. If it gets wet, wipe it dry immediately.
- Do not touch the power cord when your hands are wet and do not pull on the charger to unplug it.
- To avoid losing data, remember to make a backup (computer or paper) of the information stored in the device.
- To avoid any interference, do not use the device next to other electronic devices, a pacemaker or near medical equipment.
- Switch off the device in areas where there is a risk of explosion and when travelling by air.
- Do not use the device near inflammable or explosive sources.
- Do not expose the device to direct sunlight or any other extreme source of heat or cold.
- Do not attempt to dismantle the appliance, as this will invalidate the warranty.
- Do not put sharp objects in direct contact with the surface and do not spray cleaning products directly onto the screen.
- Do not apply strong pressure to the screen or place objects on it. This could damage the screen.
- The power socket must be installed close to the equipment and must be easily accessible.
- Keep a minimum distance around the equipment to ensure adequate ventilation.
- The ventilation openings must not be blocked by objects such as newspapers, tablecloths, curtains, etc.
- Do not place naked flames such as lit candles on the appliance.
- The appliance is intended for use in temperate climates.
- Batteries must be disposed of properly. To protect the environment, dispose of them in special collection bins.
- Do not charge the battery if the ambient temperature exceeds 45°C. To dispose of the battery, contact your local retailer and ask for information about local regulations on battery disposal or recycling.

WARNING ABOUT EPILEPSY

To be read before using a video game by yourself or your child.

I. - Precautions to be taken in all cases when using a video game.

Avoid playing games if you are tired or sleep-deprived. Make sure you play in a well-lit room by moderating the brightness of your screen. When using a video game that is likely to be connected to a screen, play at a safe distance from the TV screen and as far away from it as possible, television screen and as far away as the connection cables allow. During use, take breaks of ten to fifteen minutes every hour.

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

MAINTENANCE AND WARRANTY

II. - Warning on epilepsy. Any questions? Let's talk about it!

Some people are prone to epileptic seizures, including loss of consciousness, when they see certain types of strong light stimulation (rapid succession of images or repetition of simple geometric figures, lightning or explosions). These people are at risk of seizures when they play certain video games containing such stimuli, even though they have no medical history or have never been subject to epileptic seizures themselves. If you or a member of your family has ever experienced epilepsy-related symptoms (seizures or loss of consciousness) in the presence of light stimulation, consult your doctor before using the product. Parents should also pay particular attention to their children when they play video games. If you or your child experience any of the following symptoms: dizziness, blurred vision, eye or muscle twitching, orientation problems, involuntary movements or convulsions, or momentary loss of consciousness, stop playing immediately and consult a doctor.

Precautions to be taken in all cases when using a video game:

- Don't stand too close to the screen.
- Preferably play video games on a small screen.
- Avoid playing games if you are tired or sleep-deprived.
- Make sure you play in a well-lit room.
- During use, take 10 to 15 minute breaks every hour.

CAUTION: Prolonged use of the laptop could damage the user's health.

To avoid fire or electric shock, switch off the appliance when cleaning. Clean the appliance by wiping it with a dust cloth as you would a piece of furniture, excluding any detergent. Clean and wipe the screen with care. This product is covered by our one (1) year guarantee, with the exception of the built-in battery, which is guaranteed for six (6) months. To make a claim under the warranty or for after-sales service, you must contact your retailer with your proof of purchase. Our guarantee covers material or assembly defects attributable to the manufacturer, excluding any deterioration resulting from failure to follow the instructions for use or any untimely intervention on the item (such as dismantling, exposure to heat or humidity, etc.). The guarantee does not cover screen breakage or any damage caused by the use of an adapter other than the one supplied. As part of our ongoing efforts to improve, we may modify the colours and details of the product shown on our website, and details of the product shown on the packaging and in this manual.

WARNING! Keep this manual as it contains important information about using all the functions of your tablet, including, depending on the model, the activation of certain product functions by code. If you create a scheme or password to protect access to your tablet, it is your responsibility to keep it and write it down carefully in an accessible place that you will remember. If you forget your password, our technicians will need to re-establish access to your tablet. An estimate will be provided on request and invoiced once the estimate has been accepted. Furthermore, in the event of a reset, the user risks losing all the data on the tablet.

Reference: TLN10EN
Designed and developed in Europe - Made in China

Google, Android, Google Play and other marks are trademarks of Google LLC.
Lexibook®

All trademarks are the property of their respective companies.
©Qwant.com 2019, all rights reserved.
Magna Mobile™, all rights reserved.
©READora

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

Any questions? Let's talk!
If you have a sales problem or a complaint, please write to savcom@lexibook.com
www.lexibook.com

CAUTION: Prolonged exposure to high volumes of sound, particularly when wearing headphones or earphones, can lead to temporary or permanent hearing loss. For this reason, turn down the volume before plugging in headphones or earphones.

WARNING: At full power, prolonged listening to the tablet can damage the user's ear: the user's ear.

Information on environmental protection
Any used electrical appliance is a recyclable material and should not be disposed of as household waste! Please support us by making an active contribution to conserving resources and protecting the environment by bringing the appliance to collection points (if available).

Disposal of the battery in this product
(Applicable to countries with separate collection systems) This symbol indicates that the battery contained in this product must not be disposed of with household waste as stipulated in European Directive 2013/56/EU. Used batteries must be disposed of separately from household waste, at collection centres approved by the government or local authorities. The correct disposal of your used batteries and accumulators will avoid any harmful consequences for the environment and your own health. We strongly recommend that you take your product to a waste collection site and ask a professional to remove the rechargeable battery. Find out about the collection system for electrical and electronic products and rechargeable batteries. Never dispose of the product and used batteries with household waste and follow the rules of your local authority. For more information on how to dispose of your used batteries, contact your local council or waste collection centre.

SIMPLIFIED EU DECLARATION OF CONFORMITY

 

We, Lexibook® S.A.,
8 avenue des Aéroles, Building 11
91940 Les Llis, France

declare under our sole responsibility that the product :
Designation : Lexipad® 10"
Reference : TLN10EN

United Kingdom & Ireland
For after-sales service, please contact us at savcom@lexibook.com

The undersigned, Lexibook Limited, declares that the radio equipment of type TLN10EN is in conformity with Directive 2014/53/EU

The full text of the EU Declaration of Conformity is available at the following web address:
http://www.lexibook.com/doc/0101010_1.pdf

Yu-Hsi Man
Head of Product Research and Development
Hong Kong

Lexibook UK
PO Box 59, SOUTH MOLTON,
EX36 5AU, UK

IM code: TLN10ENM243

size: 115(w) x 180(h) mm
format: accordian fold
page: 14

size: 115(w) x 180(h) mm
format: accordian fold
page: 14