

# TALKIES-WALKIES WALKIE-TALKIES



**MODE D'EMPLOI**  
**INSTRUCTION MANUAL**  
**MANUAL DE INSTRUCCIONES**  
**MANUAL DE INSTRUÇÕES**  
**MANUALE DIISTRUZIONI**  
**BEDIENUNGSANLEITUNG**  
**GEBRUIKSAANWIJZING**

**LEXIBOOK®**

**TW42series**

**ENGLISH**

## UNPACKING


Includes:  
2 x walkie-talkies 1 x instruction manual

**WARNING:** All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

**POWER SUPPLY**  
These walkie-talkies operate on 3 x 1.5V LR03/AAA batteries for each walkie-talkie (not included).

Remove the belt clip on the rear of the walkie-talkie will allow you to access the battery door.

To remove the belt clip  
It is easier to fit the batteries without the belt clip in place.  
Pull the tab forward (away from the handset) to release the belt clip. Then lift the belt clip off.

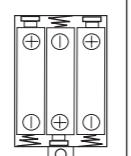

**Installing batteries:**  
1. Open the battery compartment located under the unit.  
2. Insert the 3 x 1.5V AAA/LR03 batteries observing the polarity markings inside the battery compartment.  
3. Close the battery compartment.  
4. The walkie-talkies will automatically power on and are ready for use.

**To fit the belt clip**  
Slide the belt clip down into the slot until it clicks into place.

**Non-rechargeable batteries are not to be recharged.** Rechargeable batteries are to be removed from the toy before being charged.  
Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the game for a long period of time. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**WARNING:** Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, remove the batteries and insert them again.

## PRODUCT DESCRIPTION

1. On/Off	4. Speaker	7. LED screen	10. Antenna
2. Flashlight	5. Talk	8. LED light	11. Belt clip
3. Channel choice	6. Call	9. Mic	12. Battery Door
			13. Sling

## SAFETY INFORMATION

**Important safety warning**  
To reduce radio frequency exposure when you're using your TW42series, hold the handset at least 5cm (2 inches) from your face.

Never use your walkie-talkies outdoors in a thunderstorm.

Don't use your PMR until it is completely dry.

Base unit should not be exposed to excessive heat such as sunshine, fire or the like.

The device complies with RF specifications when used near your body. Keep a distance of 2.5 cm from the body. Ensure that the device accessories, such as a device case and device holder, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

**CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATIONS.**

Keep minimum distances around the apparatus for sufficient ventilation.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;

No naked flame sources, such as lighted candles, should be placed on the apparatus;

The use of apparatus in tropical and/or moderate climates.

Batteries should not be disposed safely. Take them to the collection container in order to protect the environment;

## GETTING STARTED

**Switching the walkie-talkies on and off**  
To turn the walkie-talkies on or off, hold down the on/off button for 2 to 3 seconds. You will hear a musical tone each time to confirm. The screen will display the channel number (1 to 3).

**How to use your walkie-talkies**

The walkie-talkies have three channels, numbered 1 to 3, displayed on the LED screen. To communicate with other users within range, you must all have your walkie-talkies tuned to the same channel.

Make sure both walkie-talkies are on the same channel by holding down the channel button for 2 to 3 seconds.

To talk to your partner, hold down the talk button. Make sure you let go of the talk button when you are done talking; this will let your partner communicate back.

PMR transmission is "one way-at-a-time" while you are speaking, you cannot receive a transmission.

You will achieve best results if you hold the walkie-talkie 1.5 to 2.5 inches away from your mouth and speak at a normal volume and tone.

If you need to call your partner to get their attention, push the call button. It will send a ring tone to other handsets within range and tuned to the same channel, and alert them that you want to communicate with them.

Push down the flashlight button to use the LED light when playing in the dark.

1

**Special functions**

- Auto-squelch function:** Attenuate the background and signal noise while in reception mode, to place you in a comfortable conversation.
- One-to-one, one-to-many communication function:** You can communicate with one other walkie-talkie (included), but also with several others (not included in the box). You only have to make sure that they are all tuned to the same channel, by holding down the channel button for 2 to 3 seconds.
- Transmitting range**  
The talk range depends on environmental and terrain. It will be greatest (up to about 5 km or 3.1 miles) in wide open spaces, without traffic and less surrounding noise. If you are having issues with communicating, it is recommended to be in a location with less traffic and less surrounding noise.
- Don't try to use two walkie-talkies which are less than 1.5m (5 feet) apart. If you do, you may get interference.**
- PMR446 is an open-license band - always identify yourself when transmitting, as other people may be communicating on the same channel.**

## TROUBLESHOOTING GUIDE

Symptom	Solution
<b>No power</b>	• Battery is low or not fitted correctly. • The walkie-talkie is not switched on.
<b>Weak reception/ no reception/ noisy reception</b>	• Battery is low or not fitted correctly. • Other user is not within range. • The walkie-talkies are not tuned to the same channel. • The volume is too low: Speak in a normal voice, 5-8cm (2-3 inches) away from the microphone. • Environmental conditions are impairing reception: move to a different location away from obstructions and as high as possible. • You are holding the walkie-talkie too close to your body. • Other user is not transmitting. • There is interference from other users on the same channel: agree with the other users to use a different channel.
<b>Cannot change channels</b>	• Battery is low or not fitted correctly.

## TECHNICAL SPECIFICATIONS

**Operating frequency:**  
• Channel 1: 446.00625MHz  
• Channel 2: 446.03125MHz  
• Channel 3: 446.05625MHz

## SIMPLIFIED EU DECLARATION OF CONFORMITY

We, Lexibook® S.A.  
6 avenue des Andes  
Bâtiment 11  
91940 Les Ulis - France

Lexibook UK  
PO Box 100  
SOUTH MOLTON  
EX36 9AU - UK

Kind of product: Walkie-Talkies  
Type designation: TW42series  
Frequency range: 446.00625-446.05625 MHz  
Transmitted power: 22.65 dBm

Hereby, Lexibook Limited declares that the radio equipment type TW42series is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017  
The full text of the EU declaration of conformity is available at the following internet address:  
[https://www.lexibook.com/doc/tw42/tw42\\_3.pdf](https://www.lexibook.com/doc/tw42/tw42_3.pdf)



## MAINTENANCE AND WARRANTY

Only use a soft, slightly damp cloth to clean the unit. Do not use detergent. Do not expose the unit to direct sunlight or any other heat source. Do not immerse the unit in water. Do not dismantle or drop the unit. Do not try to twist or bend the unit.

Note: Please keep this instruction manual, it contains important information.

This product is covered by our 2-year warranty.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any carelessness action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference. In a bid to keep improving our services, we could implement changes on the colours and the details of the product shown on the packaging.

**WARNING!** Not suitable for children under 3 years. Choking Hazard - Small parts.

Reference: TW42series  
Designed and developed in Europe – Manufactured in China  
© Lexibook®

United Kingdom & Ireland  
For after-sales service, please contact us at [savcomfr@lexibook.com](mailto:savcomfr@lexibook.com)



## ENVIRONMENTAL PROTECTION

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).



## FRANÇAIS

## CONTENU DE L'EMBALLAGE

Inclus:  
2 x talkie-walkies 1 x mode d'emploi

**AVERTISSEMENT:** Tous les matériaux d'emballage, comme le scotch, les feuilles en plastique, les ficelles et les étiquettes ne font pas partie du produit et doivent être jetés.



## ALIMENTATION

Ces talkie-walkies fonctionnent avec 3 piles 1.5V LR03/AAA pour chaque talkie-walkie (non fournies). Enlevez l'attache ceinture à l'arrière du talkie-walkie pour accéder au compartiment des piles.



## POUR ENLEVER L'ATTACHE CEINTURE

Il est facile de dévisser la vis qui tient l'attache ceinture. Tirez la languette vers l'avant (éloignant l'appareil) pour détacher l'attache ceinture.



## DÉMONTAGE DES PILES

1. Ouvrez le compartiment des piles sous l'appareil.  
2. Insérez 3 piles alcalines 1.5V AAA/LR03, en respectant la polarité indiquée au fond du compartiment des piles.



## REINSERER LES PILES

3. Remettez le boîtier.  
4. Les talkie-walkies se mettent automatiquement en marche et sont prêts à l'emploi.



## POUR REMETTRE L'ATTACHE CEINTURE

Faites glisser l'attache dans la fente en cliquant.  
Retirer les accumulateurs du jeu avant de les recharger. Ne charger les accumulateurs que sous la surveillance d'un adulte. Ne pas mélanger différents types de piles ou accumulateurs, ou des piles et accumulateurs neufs et usagés. Les piles peuvent éventuellement éclater si elles sont mal manipulées. Ne pas jeter les piles dans l'eau. Retirer les piles en cas de non utilisation prolongée. Ce jeu doit être alimenté avec les piles spécifiées seulement. Les batteries ne doivent jamais être exposées à une source de chaleur excessive, par exemple la lumière du soleil ou un feu. N'utiliser que des piles de type identique ou équivalent à celles recommandées.



## ATTENTION

Ne pas utiliser le jeu contre l'humidité. S'il est mouillé, l'essuyer immédiatement. Ne pas le laisser en plein soleil, ne pas l'exposer à une source de chaleur. Ne pas le laisser tomber. Ne pas tenir de la démonter. Pour le nettoyer, utiliser un chiffon légèrement imbibé d'eau à l'exclusion de tout produit detergent. En cas de mauvais fonctionnement, essayer d'abord de changer les piles. Si le problème persiste, relâchez attentivement la notice afin de vérifier que rien n'a été ôté.



## NOTE :

Veuillez garder ce mode d'emploi, il contient d'importantes informations.



Ce produit est couvert pour toute garantie de 2 ans. Pour toute mise en œuvre de la garantie ou du service après-vente, vous devez vous adresser à votre revendeur muni d'une preuve d'achat. Notre garantie couvre les vices de matière ou de montage imputables au constructeur à l'exclusion de toute déterioration provenant non-respect de la notice d'utilisation ou toute intervention imprudente sur l'appareil, son emballage, son emplacement, montage, exposition à la chaleur ou à l'humidité... Il est recommandé de conserver l'emballage pour toute réparation ultérieure. Dans son état constant d'amélioration, nous pouvons être amenés à modifier les couleurs et les détails du produit présenté sur l'emballage.



## ATTENTION !

Ne convient pas aux enfants de moins de 3 ans. Risque de suffocation en raison des petites pièces.



## RÉFÉRENCE :

Reference : TW42series  
Conçu et développé en Europe – Fabriqué en Chine  
www.lexibook.com



## Lexibook S.A.

6 avenue des Andes  
Bâtiment 11  
91940 Les Ulis - France



## FR

TOUS LES PAPIERS



## BAC DE TRI



Pour vos demandes concernant un problème SAV ou une réclamation, écrivez à [savcomfr@lexibook.com](mailto:savcomfr@lexibook.com)



## Informations sur la protection de l'environnement

Tout appareil électrique usé est une matière recyclable et ne dev

