

Dvojazyčný vzdelávací tablet / Bilingual educative tablet



Návod na obsluhu
Instruction Manual

www.lexibook.com

LEXIBOOK®

JCPAD002i14series

SLOVENČINA

Sprievodca spustením

Interaktívny tablet s dvojazyčným dotykovým displejom pomôže vášmu dieťaťu učiť sa švédsky aj nórsky už od útleho veku.

Ak chcete tablet zapnúť, stlačte tlačidlo.

« Vložiť / Dizajn » umiestnené v spodnej časti tabletu

Ak chcete tablet vypnúť, znova stlačte kláves.

« Vložiť / Dizajn ».

Poznámka: Tablet sa po niekoľkých minútach nečinnosti automaticky vypne.

Obsah balenia

Pri rozbaľovaní výrobku sa uistite, že obsahuje nasledujúce časti:


- 1 x Vzdelávací tablet
- 3 x Batérie typu AAA/LR03 1,5 V
- 1 x Návod na obsluhu

VAROVANIE: Všetky obalové materiály, ako pásky, plastové háčky, viazacie drôty a značky nie sú súčasťou tohto výrobku a musia byť zlikvidované.

Inštalácia a výmena batérií

Tablet je napájaný 3 x 1,5V batériami AAA/LR03 (sú súčasťou balenia).

1. Use a screwdriver to open the battery compartment located on the bottom of the unit.
2. Insert 3 x 1.5V AAA/LR03 batteries, paying attention to the polarity shown in the battery compartment.
3. Close the battery compartment and tighten the screw.

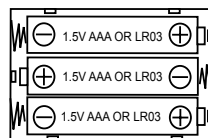

Batérie, ktoré nie sú dobíjacie, sa nesmú nabíjať. Pred nabíjaním vyberte dobíjacie batérie z výrobku. Nabíjacie batérie dobíjajte len pod dohľadom dospelé osoby. Nemiešajte rôzne typy batérií alebo nové a použité batérie. Odporúčame používať iba batérie rovnakého alebo podobného typu. Batérie musia byť vložené so správnou polaritou. Vyberte vybité batérie z výrobku. Prívodné svorky nesmú byť skratované. Nevhadzujte batérie do ohňa! Vyberte batérie, ak nebudete používať výrobok počas dlhšieho obdobia. Batéria nesmie byť vystavená nadmernému teplu, ako je slnečné žiarenie, oheň a podobne.

VAROVANIE: Porucha alebo vymazanie pamäti môžu byť spôsobené silným rušením alebo elektrostatickým výbojom. Ak by došlo k výskytu nejakých nezvyčajných funkcií, vyberte batérie a znova ich vložte.

Kľúče a aktivity

Písmená
Letters

Objavovanie písmen

Stlačte kláves « Písmená », potom písmeno abecedy a tablet vysloví príslušné písmeno. Ak chcete počúvať rôzne hudobné noty, stlačte kláves « Čísla »

Slová
Words

Objavovanie slov

Stlačte kláves « Slová », a potom číslo alebo písmeno. Tablet vysloví zvolené slovo.

Hláskovanie
Spelling

Učenie výslovnosti slov a čísel

Stlačte tlačidlo « Výslovnosť », a potom číslo alebo písmeno. Tablet vysloví zvolené slovo.

Kde je?
Where is?

Interaktívny KVÍZOVÝ režim

Stlačte tlačidlo «Kde je?» / «Ktorý je?» pre vstup do KVÍZOVÉHO režimu.

Tablet položí dieťaťu otázku a dá mu približne sedem (7) sekúnd na to, aby našlo požadované slovo, písmeno alebo číslo.

Zariadenie pred vypnutím zopakuje otázky trikrát.



Objavovanie hudby a nástrojov

Stlačením klávesu nástroja si vypočujete 3 zodpovedajúce zvuky.



Stlačením klávesy hudby môžete počúvať rôzne dostupné melódie.

Opätovným stlačením klávesy spustíte ďalšie melódie.



Stlačením tejto klávesy zopakujete písmeno, slovo atď.



Stlačením tohto tlačidla prepnete medzi slovenčinou a angličtinou.



Stlačením kláves « + » a « - » zvýšite alebo znížite hlasitosť zvuku.

Údržba a záruka

Používajte iba mäkkú, mierne navlhčenú handričku na čistenie prístroja. Nepoužívajte čistiace prostriedky. Nevystavujte prístroj priamemu slnečnému žiareniu alebo inému zdroju tepla. Neponárajte prístroj do vody. Nerozoberajte prístroj a nenechajte ho spadnúť.

POZNÁMKA: Odložte si tento návod na obsluhu, pretože obsahuje dôležité informácie. Na tento výrobok poskytujeme 2-ročnú záruku. Pri každej reklamácií v rámci záruky, alebo v rámci pozáručného servisu sa obráťte na vášho distribútora a predložte platný doklad o kúpe. Naša záruka sa vzťahuje na všetky výrobné chyby materiálu a spracovania s výnimkou zhoršenia v dôsledku nedodržania návodu na obsluhu alebo akejkoľvek neopatrnej manipulácie vykonanej na tomto predmete (napr. demontáž, vystavenie teplu a vlhkosti, atď.) Odporúčame vám, aby ste si obal odložili pre ďalšie použitie. V snahe dosiahnuť zlepšovanie našich služieb sme mohli vykonať farebné úpravy a iné podrobnosti oproti výrobku zoznamom na obale.

UPOZORNENIE! Nevhodné pre deti do 36 mesiacov. Nebezpečenstvo udusení – Malé časti.

Referencia: JCPAD002i14series

Navrhnuté a vyvinuté v Európe – Vyrobené v Číne
© LEXIBOOK®

Lexibook S.A.
6 avenue des Andes
Bâtiment 11
91940 Les Ulis
France

Pre popredajný servis nás kontaktujte na adrese
savcomfr@lexibook.com

www.lexibook.com

Ochrana životného prostredia:

Nepotrebné elektrické spotrebiče môžu byť recyklované a nesmú sa likvidovať spolu s bežným domovým odpadom! Podporujte aktívne zachovanie prírodných zdrojov a pomáhajte chrániť životné prostredie tým, že zanesiete tento prístroj do zberného centra (ak je k dispozícii).



Start-up Guide

The interactive bilingual touchscreen tablet will help your child learn both French and English from an early age. To switch on the tablet, press the  key located at the bottom of the tablet.

To switch off the tablet, press the  key again.

Note: the tablet turns off automatically after a few minutes of inactivity.

Packaging Contents

When unpacking, ensure that the following elements are included:

- 1 x Educational tablet
- 3 x AAA/LR03 type batteries 1,5V 
- 1 x Instruction manual


WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded.

Battery Information

The educational tablet works with 3 x 1.5V  AAA/LR03 type alkaline batteries (included).

Installing batteries:

1. Using a screw driver, open the battery door located at the rear of the unit.
2. Insert 3 x 1.5V  AAA/LR03 batteries observing the polarity markings inside the battery compartment.
3. Close the battery compartment and tighten the screw.

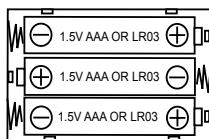

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the product for a long period of time. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, remove the batteries and insert them again.

Keys and Activities



Discovering letters

Press the "Letters" key, then a letter of the alphabet and the tablet will say the corresponding letter. Press the 'Numbers' key to listen to different musical notes.



Discovering words

Press the "Words" key, then a number or letter. The tablet pronounces the chosen word.



Learning the spelling of words and numbers

Press the "Spelling" key, then a number or letter. The tablet spells and then pronounces the chosen word.



Interactive QUIZ mode

Press the "Where is?" / "Which one is?" key to enter QUIZ mode. The tablet asks the child a question and gives him/her about seven (7) seconds to find the word, letter or number asked. The device repeats the question three times before shutting down.



Discovering music and instruments

Press the instrument keys to listen to the 3 corresponding sounds.



Press the music key to listen to the different melodies available. Press the key again to launch the next melodies.



Press this key to repeat a letter, a word, etc.



Press this key to switch between Slovak and English.



Press the "+" and "-" buttons to increase and decrease the sound volume.

Maintenance and Warranty

Only use a soft, slightly damp cloth to clean the unit. Do not use detergent. Do not to expose the unit to direct sunlight or any other heat source. Do not immerse the unit in water. Do not dismantle or drop the unit. Do not try to twist or bend the unit.

Note: Please keep this instruction manual, it contains important information.

This product is covered by our 2-year warranty. For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference.

In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

WARNING! Not suitable for children under 3 years. Choking Hazard – Small parts.

Reference: JCPAD002i14series

Designed and developed in Europe – Made in China

© LEXIBOOK®

United Kingdom & Ireland

For after-sales service, please contact us at savcomfr@lexibook.com.

www.lexibook.com

Lexibook UK
PO Box 59
SOUTH MOLTON
EX36 9AU
UK



Environmental Protection

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).



Correct disposal of batteries in this product

(Applicable in countries with separate collection systems) This symbol means that the product contains a battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health. Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.

